

HOW TO USE Conway Stewart PENS

Thomas Gordon

LEVER FILLING PENS



To Fill.—Unscrew the safety cap, dip nib into ink until completely covered, then raise lever until at right angles to pen. Return the lever, wait ten seconds to ensure complete filling of sac. Press lever home and the pen is filled. Wipe nib and section dry of all surplus ink.

To Clean.—Operate as for filling, using clean water, repeating the charging and discharging process several times to clear the ink-ducts of the "feed".

NOTE.—Under no circumstances put the whole pen into water to clean.

Caution.—Lifting the lever compresses the ink-sac and expels ink from the pen. Never raise the lever if there is likely to be ink in the pen unless the nib is held over an ink bottle. Do not twist or remove the nib section; you may injure the ink container.

ANTI-CLOCKWISE

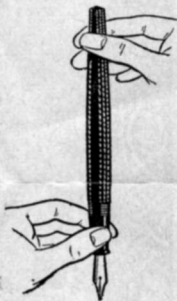


FIG. 1

CLOCKWISE

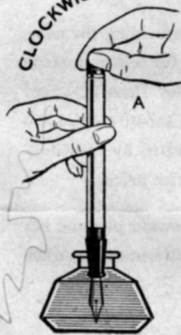


FIG. 2

'SPEEDY PHIL' PENS

Hold section in left hand and unscrew barrel with right hand rotating in an anti-clockwise direction (fig. 1). Immerse nib in ink (fig. 2) rotating knurled end 'A' slowly in clockwise direction for one click. Hold pen in this position for ten seconds to ensure maximum filling. Remove pen from ink and wipe nib and section free of all surplus ink. Replace barrel.

NOTE.—The tube filling unit must not be removed from section.