

"DE LUXE" MODEL



Propel or repel the lead as required by rotating the cap (1) in either direction.

TO REFILL PENCIL

When stub of used lead has been ejected, repel cap (1) until slider (2) is drawn clear of the spiral (4).

Unscrew refill nut (3) and extract new lead. Replace refill nut.

Now hold slider grip (5) between thumb and finger and push back leadholder (6) to make sure that no particle of lead remains.

Still holding slider grip, insert new lead into holder (6) to its fullest extent. FAILURE TO PUSH REFILL RIGHT INTO HOLDER MAY CAUSE THE LEAD TO SPRING UP AND DOWN WHEN WRITING.

Push loaded leadholder up the slider as far as possible, replace the whole unit into spiral and propel as directed.

"DE LUXE" BALL PEN



Specially made to match the "DE LUXE" Pencil.

Hold pen barrel (3) firmly in hand and press cap (1) downwards to expose or retract ball point.

TO REFILL BALL PEN

Unscrew cap (1) from barrel (3).

Withdraw empty refill case (2) from barrel (3).

Insert new refill case in barrel (3).

Screw cap (1) on to barrel (3).

IMPORTANT. To prevent damage to the ball point of the pen, it should always be sheathed when the pen is not in use.

YARD-O-LED

PENCILS and BALL PENS

and

YARDOLETTE PENCILS

MADE IN ENGLAND

BEFORE REFILLING YOUR PENCIL OR BALL PEN, PLEASE REFER TO THE ILLUSTRATION AND INSTRUCTIONS FOR THE MODEL CONCERNED.

Pencils, ball pens and refills are obtainable from all high class Jewellers, Stationers and Stores.

IMPORTANT. Ill-fitting refills are one of the main causes of damage to the mechanism of a propelling pencil or ball pen. It is essential, therefore, that only Yard-O-Led or Yardolette refills are used and these are available in the following grades and colours:

Yard-O-Led pencil refills	... HH, H, HB, B and BB.
Indelible, Red, Blue, Green and Yellow.	
Yardolette pencil refills	... HH, H, HB, B and Indelible.
Yard-O-Led ball pen refills	... Blue, Red and Green.

YARD-O-LED PENCIL CO. LTD.,
1, Great Cumberland Place,
London, W.1.

DIPLOMAT MODEL



Propel or repel the lead as required by rotating the cap (1) in either direction.

TO REFILL PENCIL

When stub of used lead has been ejected, repel cap (1) until slider (2) is free and can be drawn clear of the spiral (4).


Unscrew refill nut (3) and extract a spare lead. Replace refill nut.

Now hold slider grip (5) between thumb and finger and push back leadholder (6) to make sure no particle of lead remains.

Still holding slider grip, insert new lead into holder to the fullest extent. FAILURE TO PUSH REFILL RIGHT INTO HOLDER MAY CAUSE THE LEAD TO SPRING UP AND DOWN WHEN WRITING.

Push loaded leadholder up the slider as far as possible, replace the whole unit into the spiral and propel as directed.

UNIVERSAL MODEL

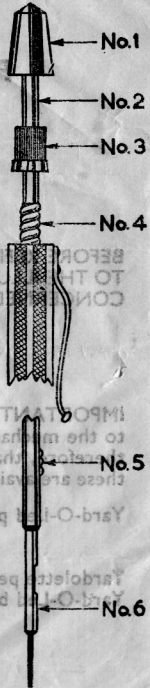

ARISTOCRAT MODEL



Propel or repel the lead as required by rotating the cap (1) in either direction.

TO REFILL PENCIL

When stub of used lead has been ejected, repel cap (1) until slider (2) is free and can be drawn clear of the spiral (4).


Unscrew clip nut (3) and remove ring clip (7). Obtain a refill from spare leads in magazine. Replace ring clip by sliding it down the spiral and making sure shaft of clip is directly over the slot (8), screw down clip nut, thus locking clip into place.

Now hold slider grip (5) between thumb and finger and push back leadholder (6) to make sure no particle of lead remains.

Still holding slider grip, insert new lead into holder to the fullest extent. FAILURE TO PUSH REFILL RIGHT INTO HOLDER MAY CAUSE THE LEAD TO SPRING UP AND DOWN WHEN WRITING.

Push loaded leadholder up the slider as far as possible, replace the whole unit into the spiral and propel as directed.

RECORDER MODEL

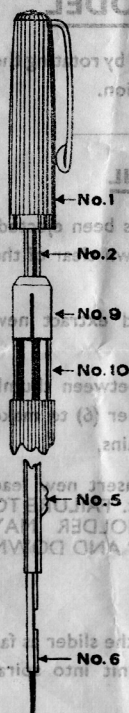

Propel or repel the lead as required by rotating the cap (1) in either direction.

TO REFILL PENCIL

When stub of used lead has been ejected, repel cap (1) until slider (2) is free and can be drawn clear of the barrel.

Pull off refill sleeve (9) and obtain a refill lead from the magazine (10). Replace refill sleeve.

Now hold slider grip (5) between thumb and finger and push back leadholder (6) to make sure that no particle of lead remains.

Still holding slider grip, insert new lead into holder to the fullest extent. FAILURE TO PUSH REFILL RIGHT INTO HOLDER MAY CAUSE THE LEAD TO SPRING UP AND DOWN WHEN WRITING.

Push loaded leadholder up the slider as far as possible, replace the whole unit into the barrel, and propel as directed.